


## ■ EXTERIOR MATERIALS

No.	PARTS	MATERIALS	COLOR		R (MUNSELL)			
No.	PARIS	MATERIALS	-W		-H	-S		
01	FRONT PANEL	ABS RESIN				SILVER		
02	SIDE PANEL-R	ABS RESIN	WHIT	Ξ	DARK	GRAY		
03	SIDE PANEL-L	ABS RESIN	/7.1B:HUE	١	/1.7PB:	HUE \		
04	PANEL-FRONT	ABS RESIN	9.2:BRIGH	TNESS	2 :BR	IGHTNESS)		
05	PANEL-BACK	ABS RESIN	\o. 2∶CHROM	a /	\0.38:C	HROMA /		
06	SIDE COVER	ABS RESIN	,	,	,	,		
07	DRAIN TANK	ABS RESIN						
08	BASE	PP RESIN			BLAC	<b>\</b>		
09	AIR FILTER	PP RESIN			BLACI	(		
10	BRACKET	STAINLESS S (1.2mm THIC						

## ■ BLOCK DIAGRAM

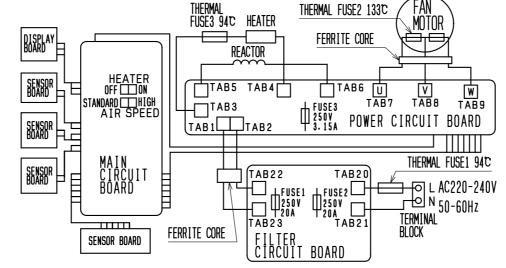

CE

## ■ SPECIFICATIONS

MODEL	RATED VOLTAGE (V)	RATED FREQUENCY (Hz)	HEATER	MOTOR SPEED	RATED CURRENT (A)	POWER CONSUMPTION (W)	AIR SPEED (m/s)	NOISE (dB)		DRAIN TANK CAPACITY (&)
JT-SB216JSH2-W-NE JT-SB216JSH2-H-NE		50-60	ON	HIGH STANDARD	5.7-6.2 4.9-5.3	1240 1070	106 98	59 56	11	0.8
JT-SB216JSH2-S-NE		E	OFF	HIGH Standard	3. 9 - 4. 2 3. 0 - 3. 2	720 550	106 98	59 56		
MOTOR TYPE BF	S	AFETY MEAS	SURES	THERMAL FUSE AND OVER CURRENT FUSE						
DIELECTRIC STRENGTH A.C. 3000V FOR 1MINUTE				NSULATION	RESISTANCE	10M♀ OR MORE (MEASURED BY DC500V MEGGER)				


- Air speed is calculated from the static pressure measured by the pitot tube. (at the nozzle)
  Noise is the A range value measured in an anechoic room. (Average as 3 points, 2m from the front and both sides)
- The heater is turned off automatically when ambient temperature is 30°C or more.
- Compliance : LVD, EMC Directive, ErP Directive (COMMISSION REGULATION(EC) No. 1275/2008), RoHS Directive.



- 1. Read the installation manual thoroughly before beginning installation to ensure the appliance is installed safely and correctly. Local installation standards should be obeyed and installation should be performed by the dealer or a qualified professional.
- A means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules. Use wires in compliance with the wiring rules within a range of 1.0mm<sup>2</sup> or over and less than 2.5mm<sup>2</sup>.
- 3. Do not install in the following types of location.

2. Be sure to install a ground-fault circuit interrupter.

- Nutdoors
- ·Where the temperature could be lower than O℃ or higher than 40℃.
- ·Where the humidity could be lower than 5%RH or higher than 95%RH.
- ·Where there is a lot of dust or condensation.
- ·Where salt damage could occur.
- Vehicles (incl. ships, trains, airplanes)
- ·Where there corrosive, neutral, or reductive gases are present.
- ·Where there are food, tableware, etc nearby because water may splash.
- ·Where the appliance may come into direct contact with water.
- ·Where the appliance is direct sunlight or strong light.
- (May cause the sensors to malfunction)
- · Rooms that have a sterilization basin, swimming pools, bathrooms.

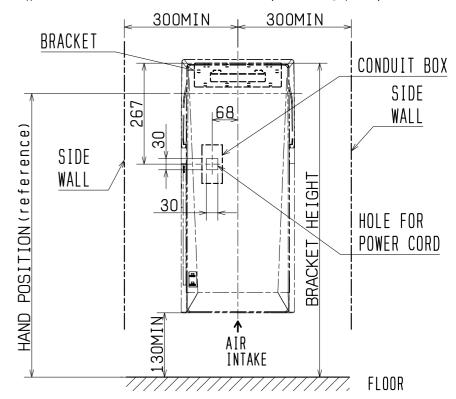

## RECOMMENDATIONS

		HAND POSITIO	N	BRACKE	T	HEIGH		
	MEN	810	925					
	WOMEN	790	905					
	DISABLED	740 to 80	0	865	t o	915		
* FOLLOW LOCAL GUIDELINES								

APRROVED	DRAWN
M. Fukano	K. Sawabe



SCALE:	NTS		PROD	UCT	:MI	TSUB	ISHI	Н	AND	DRY	/ER
UNIT:	m m		MODE	:	JT-	SB21	6JSH	12-	W/H	/S-	-NE
DATE: AU	IG. 24.	2015	DWG.	No.	:	NL 11	5002	)			